

PRODUCT USER GUIDE

MicroLED 100P Illuminator



Rev: C5



PLEASE READ THIS USER GUIDE BEFORE INSTALLING, OPERATING
OR PERFORMING MAINTENANCE ON THE ILLUMINATOR UNIT



INTRODUCTION

Thank you for purchasing this UFO illuminator.

To ensure that the illuminator is set up optimally and gives a long service life, please read this user guide before installing, operating or performing any maintenance on the unit.

Please keep this user guide for future reference.

MODELS COVERED BY THIS USER GUIDE

UFO MIC 100P-3 [3000K white light]

UFO MIC 100P-4 [4000K white light]

UFO MIC 100P-6 [6000K white light]

IMPORTANT

This product must be installed in accordance with the applicable installation code, by a person familiar with the construction and operation of the product, and the hazards involved.

These illuminators are not mains dimmable.

The LED array and heatsink in this illuminator can be replaced when it reaches end of life. Contact UFO for details.

Type Y Attachment: If the external flexible cable or cord of this luminaire or associated PSU/driver is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person to avoid a hazard.

Location: Do not locate this illuminator closer than 200mm from any flammable surface.

Clearance / Ventilation: It is imperative that a gap of 200mm is left around the unit. This is to allow air to circulate and prevent overheating. The location must have free ventilation and must not have an ambient temperature higher than that specified for the luminaire.

Mounting: This luminaire comes with an integral mounting plate for securing the unit to a vertical or horizontal surface. Refer to the instruction sheet supplied with the plate.

Warning: Never look directly at the luminaire through the fiber port of the illuminator.

Warning: The luminaire should be positioned so that prolonged staring into the luminaire at a distance closer than 2.7 metres is not expected.

UFO will accept no liability for damage, or associated claims, caused by not following the installation and safety instructions contained within this user guide.

MOUNTING PLATE

This luminaire supplied with a separate mounting plate. If using the mounting plate refer to the fitting instructions supplied with it.

POWER SUPPLY REQUIREMENTS

This luminaire is powered by a 12V Power Supply Unit or 12V Constant Voltage Driver. Remove the PSU/driver from its box.



Plug the jack plug into the socket in the back, and the illuminator is now ready for connection.

CONNECTION

There are 2 connections required - the fiber port and the mains supply. The fiber port should be connected first. Connect and secure the fiber optic connector into the front of the unit and secure using the M5 locking screw.

Plug the mains plug into the electrical supply socket. Switch on the power, the LED indicator will illuminate, and the illuminator will illuminate. If no light is produced consult the troubleshooting section.

OPERATION

This illuminator is a static white unit with no control options. Once set up as detailed in the connection section of this manual the unit is ready for use.

MAINTENANCE

To ensure a long working life and the safe, reliable operation of the illuminator, it is very important to maintain it properly and ensure it is installed in an appropriate and safe location.

Before performing any maintenance on the illuminator it should be disconnected from the power supply and allowed to cool down.

- The illuminator vents should be blown out with compressed air at least every 12 months, or more often if located in a dusty environment.
- After the illuminator has been installed, check the vents to ensure they are clear of dust and debris. Blow out with compressed air if required.
- The body of the illuminator can be cleaned using a soft damp cloth. Do not use any abrasives on the unit.

Note that a record of all maintenance **MUST** be kept in the table below, indicating what maintenance was undertaken. This must be dated and is required for warranty purposes.

SAFETY GUIDANCE

- A gap of 200mm (8") **MUST** be left around the unit. This is to allow air to circulate and prevent overheating. The location must have free ventilation and must not have an ambient temperature higher than that specified for the luminaire.
- The outer body of the illuminator may become hot - keep away from all combustible materials and **DO NOT** locate this illuminator within 200mm (8") of any flammable surface.
- The illuminator must not be run without the fiber optic harness fitted.

MAINTENANCE LOG

Date	Maintenance Undertaken

TROUBLESHOOTING

Problem	Possible Cause(s)	Remedy
Unit is dead - LED power indicator is not illuminated	Mains supply off	Check supply and reinstate
	Loose mains plugs	Check plugs
	PSU failed	Replace PSU
Unit is dead - no light output but LED power indicator is still illuminated	LED array failure	Contact UFO
Poor light output on fiber	Unit needs cleaning	Carefully clean LED Lens with dry cloth
		Clean fiber common end
	Fiber port connector not plugged in correctly	Ensure plugged in correctly and secured with locking screw

NOTES

TECHNICAL SPECIFICATION

Port connector size	30mm diameter
Fiber type	Glass / PMMA
Material/Finish	ABS (black, silver or white)
Dimensions (L x W x H)	132mm (5.2") x 98mm (3.8") x 67mm (2.6")
Weight	0.3kg
Operating Environment	Indoor use - IP20
Min Ambient Temp.	-10°C
Max Ambient Temp.	+45°C

LED Array Type	White light
LED Array Power	2W
LED Array Model	Cree XLamp XR-E
LED Array Life (L70, B10)	> 54,400 hours @ 25°C
Warm White Option	3000K \ 80CRI \ 120lm
Neutral White Option	4000K \ 75CRI \ 126lm
Cool White Option	5000K \ 75CRI \ 150lm

Supply Voltage	90-264Vac
Mains Running Current	0.03A @ 240Vac
Mains Voltage VA rating	8VA
External PSU Type	Power Pax, 12V, 2A, 24W



DESIGN



SPECIFY



BUILD



INSTALL

United Kingdom • United States • Germany • Europe • UAE