




UFO 1D Showerproof Downlight Fitting Instructions

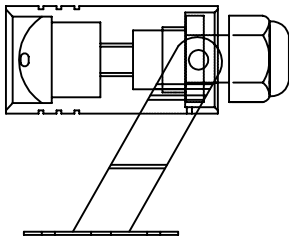


(1) Loosen the gland at the back of the fitting so that the ferrule end can fit through.

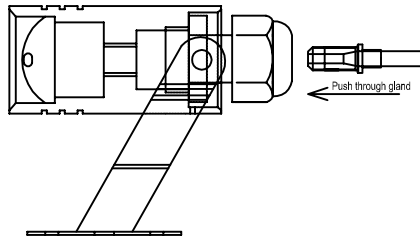

(2) Line the ferrule up and push through gland and into fitting.

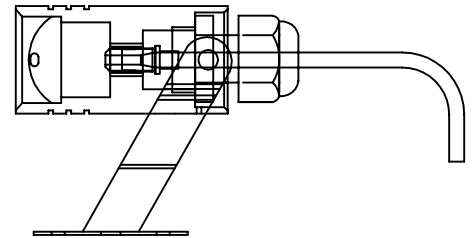

(3) Tighten the fitting onto the ferrule by turning the fitting, not the fibre optic tail.

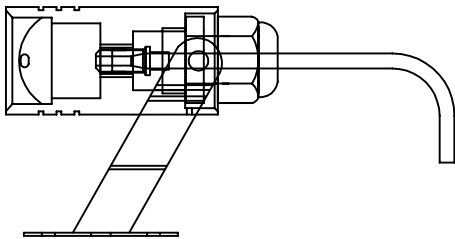

(4) Tighten gland to secure ferrule and protect from water ingression.

Note:

It is sometimes difficult to screw the fitting onto the ferrule with the gland in place. In this case, completely remove both parts of the gland from the fitting and thread the ferrule end through them. The fitting can then be more easily tightened onto the ferrule and the gland can then be replaced.